

Memory Map ServoPod IsoMax V0.82

DATA MEMORY

0000 02BD	Data RAM (Kernel)
02BE 0FFF	Data RAM (User)
1000 17FF	peripherals reserved
1800 1FFF	
2000 2FFF	Data Flash (SAVE- RAM)
3000 3FFF	Data Flash (User)

PROGRAM MEMORY

0000 5801	Program Flash (Kernel)
5802 7CFF	Program Flash (User)
7D00 7DFF	User Interrupt Vectors

8000 EFFF	Program Flash (User)
F000 F7DF	Program RAM (User)
F7E0 F7FF	Program RAM (Kernel*)

* Program RAM is used by the kernel only for the Flash programming routines. This space is otherwise available for the user.